


Hose Flow Chart

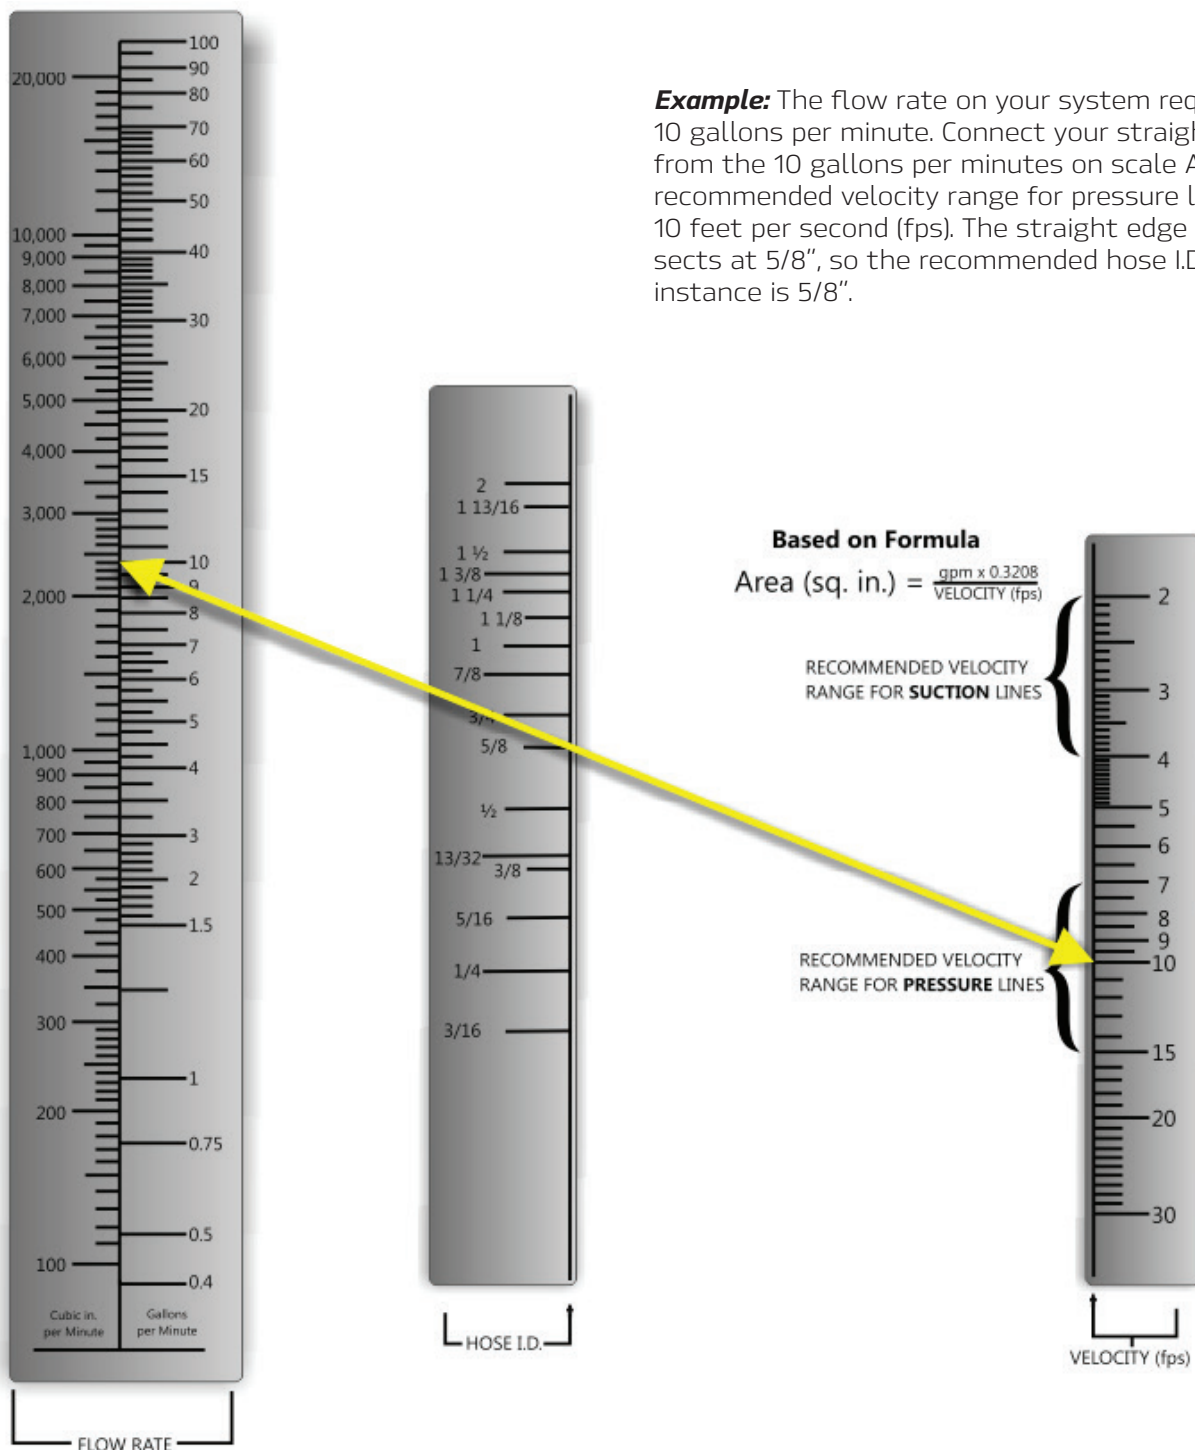

How to use this Chart: Determine the proper flow rate that your system requires, then connect a straight edge from the selected flow rate to the recommended velocity range. The required hose I.D. will appear at the intersection of the straight edge and the centre column. If the straight edge passes through the scale between sizes listed, use the next largest I.D. hose.



TAIPAN

Email: sales@taipan.com.au
 Fax: 07 5428 1311

CONTACT US 1300 654 782
www.taipan.com.au